

FP-ZUH12000Dedicated Dust Filter

FP-AF120A
FP-AF120F



How to Install the Dust Filter

Safety Precautions

For Your Safety

The ⚠ **WARNING** and ⚠ **CAUTION** indications in this document indicate the following:

⚠ **WARNINGS** Failure to observe warnings could result in death or serious injury.


⚠ **CAUTIONS** Failure to observe cautions could result in injury or property damage.

This section lists important precautions that must be followed to ensure safe and correct use of the product. Read them before using the product and observe them during use.


- Make sure to firmly install, mount, and tighten all parts. If used at a height, falling equipment can cause serious accidents.
- Before starting work, turn off the power and make sure the unit has cooled sufficiently.
- When installing the dust filter, ensure the projector unit is stable and secure.

Introduction

Required Items for Dust Filter Installation

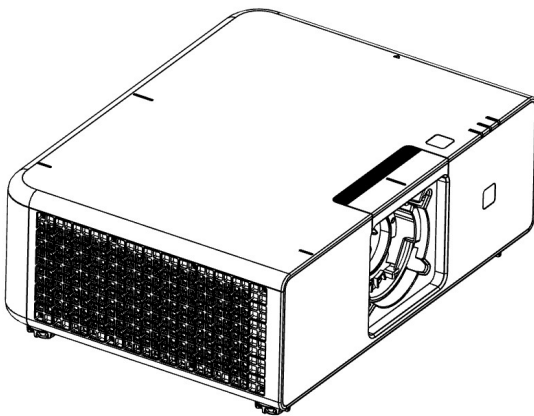

Projector Unit

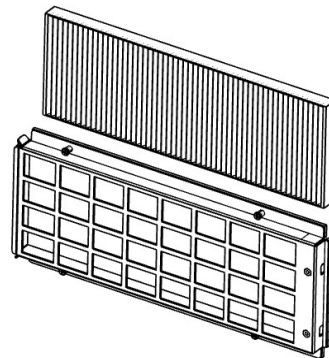

Dust Filter


Dust Filter Cover




Phillips

Dust Filter Installation Procedure

Step1: Attach the filter to the projector's intake side.

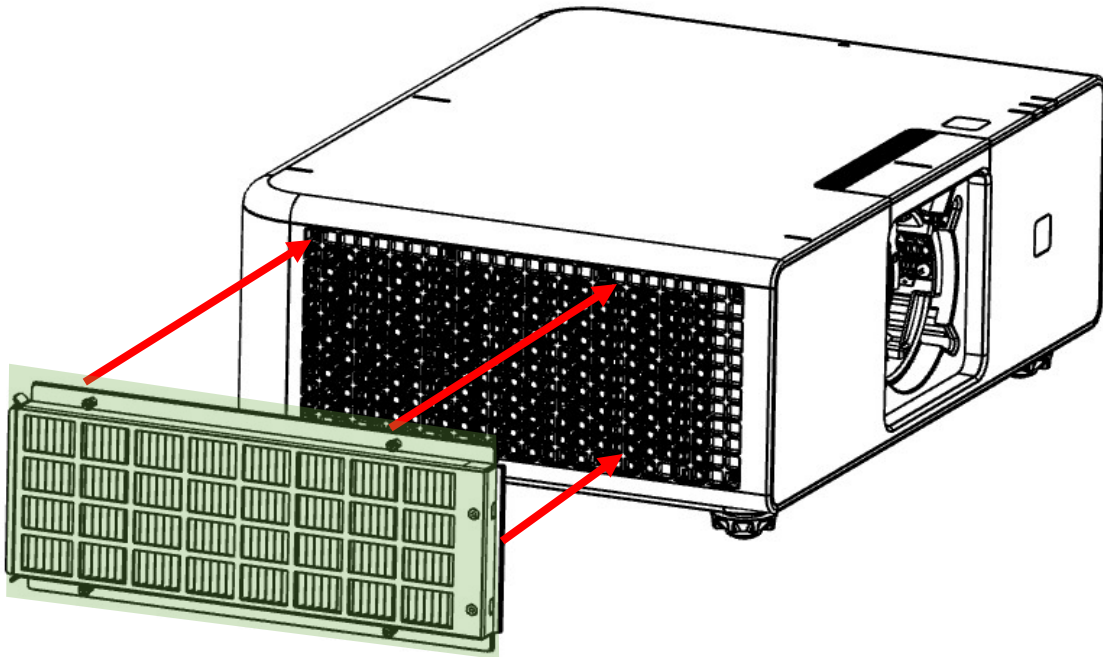

Secure the filter to the filter mounting screw holes using the screws supplied with the frame.

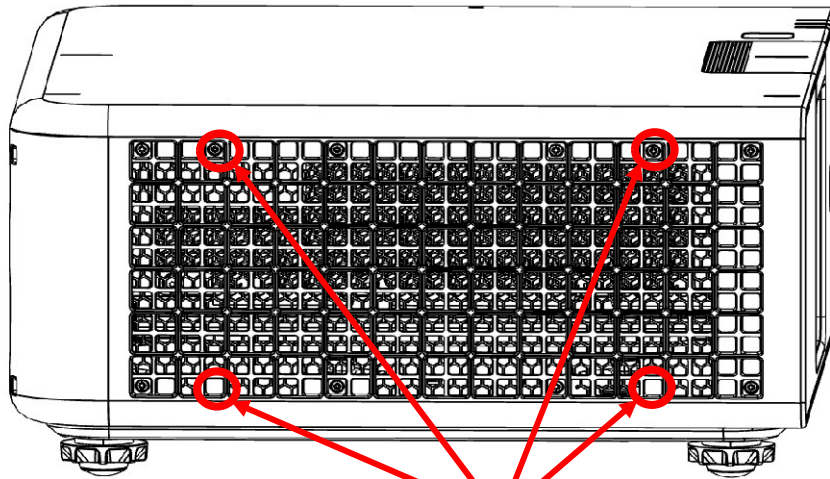

Filter mounting screw-hole positions



CAUTIONS

Ensure correct filter placement.


* After installing the dust filter, please reset the filter usage time via the menu:

ADVANCED (SYSTEM SETUP) > Filter Settings> Reset Filter Usage Time

to reset the filter usage time.

How to Clean the Dust Filter

Step1:Using a thin rod, push out the filter and remove it from the frame.

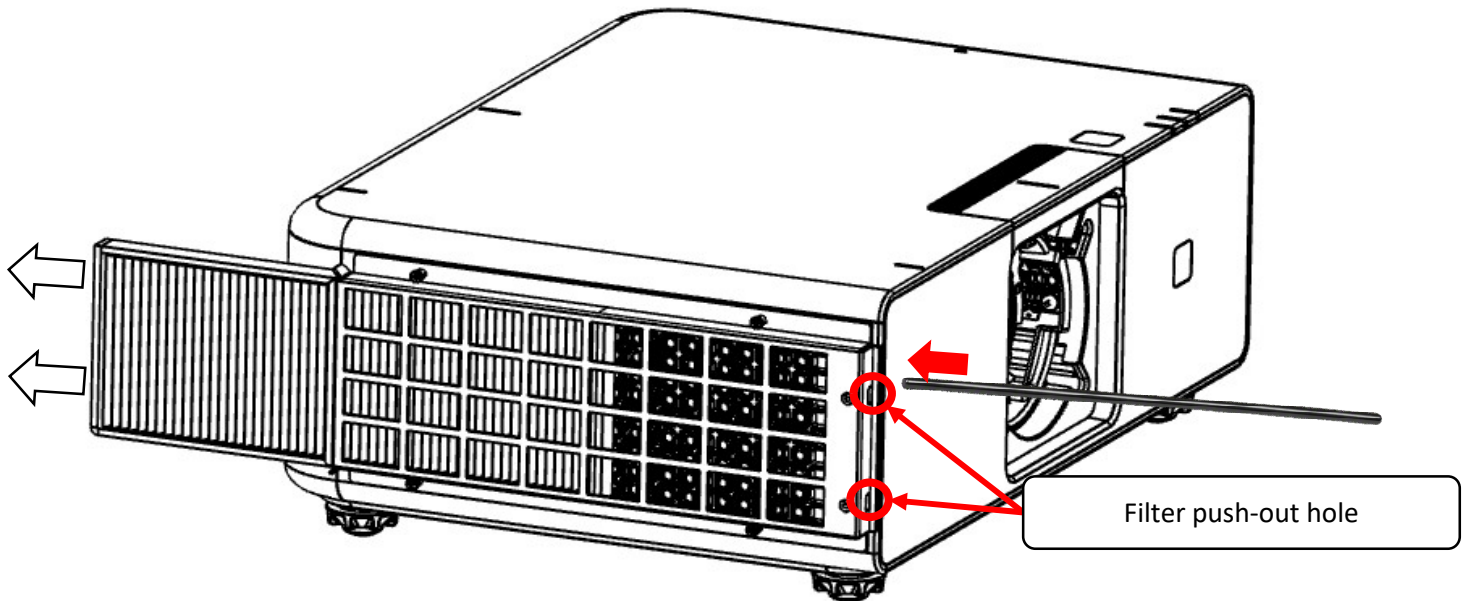


CAUTIONS

To avoid damaging the filter, use a plastic rod or another rod with a rounded tip to push out the filter.

When installing the filter, insert it by following the removal procedure in reverse order.

Step2:Vacuum the surface of the dust filter.

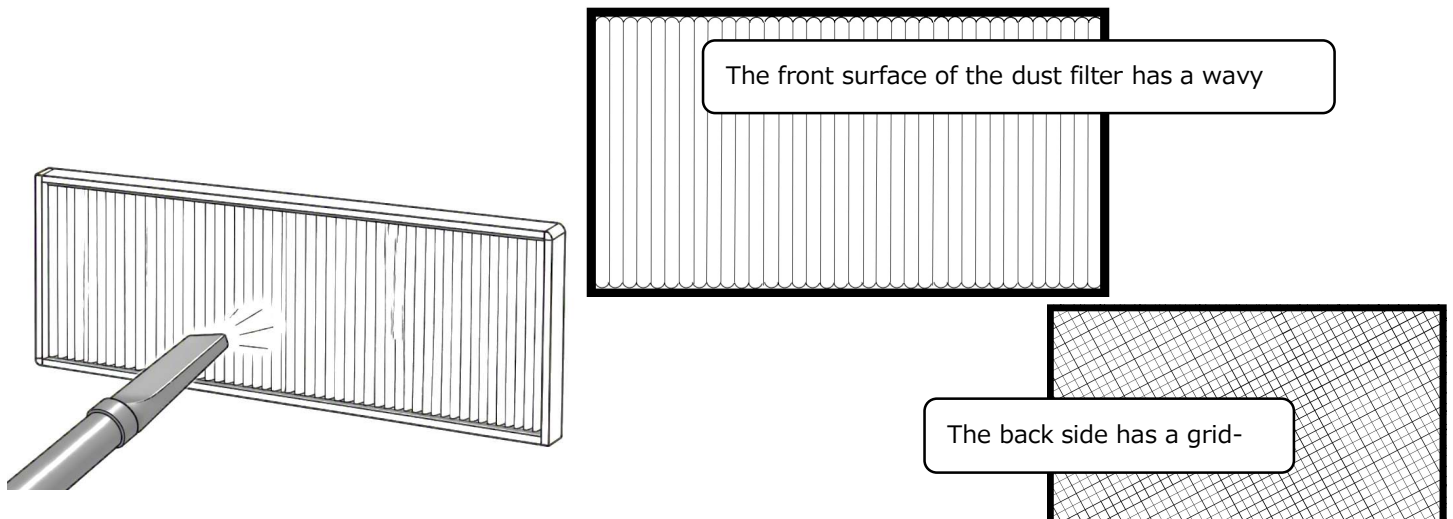

CAUTIONS

Make sure to clean the dust filter in the correct direction.

Do not wash the dust filter with water.

Do not use an air duster.

* If the projector powers off due to an abnormal temperature error after cleaning the dust filter, replace the dust filter.

* The frequency of dustfilterreplacement depends significantly on the operating environment.