

# FUJIFILM

## FP-ZUH Series Firmware



### Firmware Update Procedure

**FUJIFILM Corporation**

JP1

# Introduction


This manual explains the procedure for updating the firmware of FP-ZUH Series projectors.




## CAUTIONS

- Do not turn off the projector power during the firmware update.
- If the power is interrupted during the update, the projector may fail to boot normally.
- Perform the update in a stable power and network environment.
- The update must be performed by a user with administrator privileges.
- Confirm the current firmware version before starting the update

## Required Items

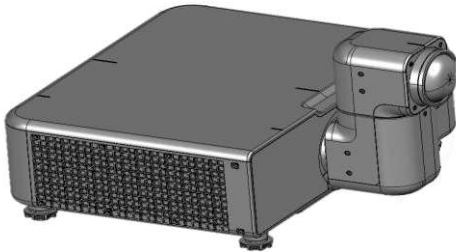


Projector (FP-ZUH Series)

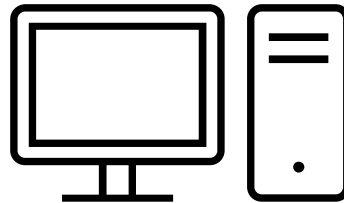

PC



LAN cable

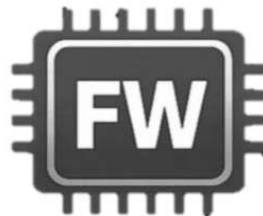

Firmware file

# Firmware Update Procedure

 
## Step 1: Preparing the Web Control Function

To use the Web Control function, the following settings are required.  
The PC and the projector must be connected to the same network.

### 1. Check the projector IP address


Using the remote control or keypad, select:

MENU → Advanced Settings → LAN Settings → IPv4 Settings

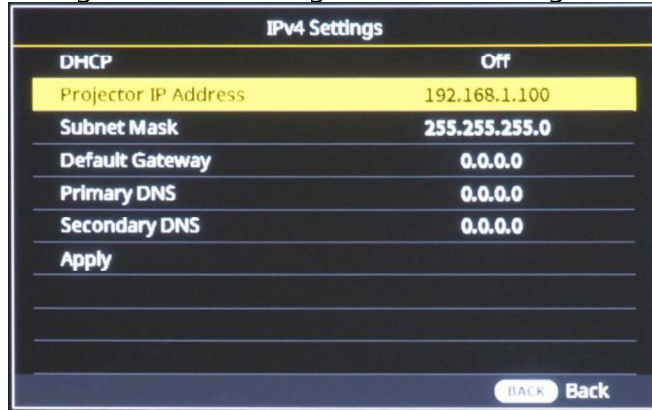

2. Open the PC network settings and manually configure Internet Protocol Version 4 (TCP/IPv4) to match the projector's network.

 Example:

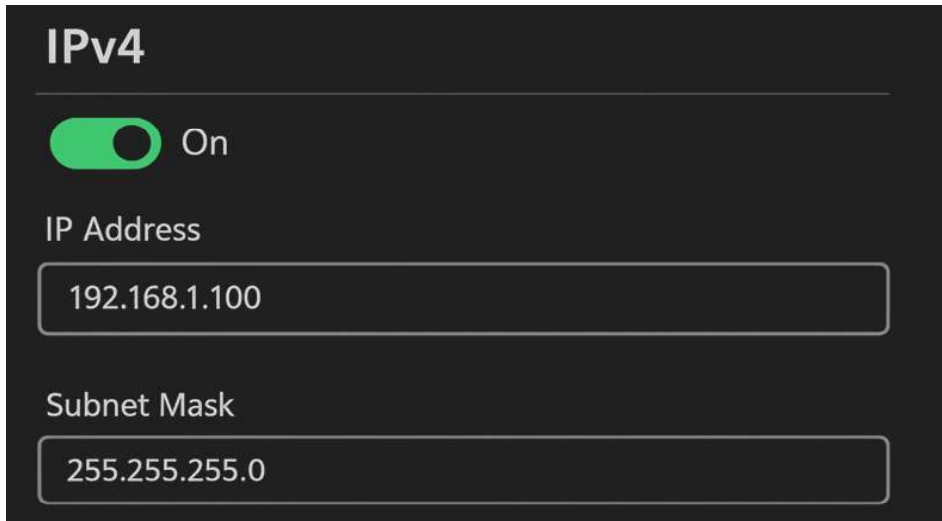

### MEMO

- Refer to your PC's user manual for details on IP address configuration.
- The last three digits of the IP address (192.168.1.XXX) must be different from the projector's IP address.

## Step 2: Accessing Web Control Function

 
1. Enter the projector's assigned IP address into the address bar of your web browser. .



2. On the login screen, enter the username and password.

By default, the following two types of usernames are preconfigured.

admin	All web control functions are available.
user	Basic operations of the web control function are available.

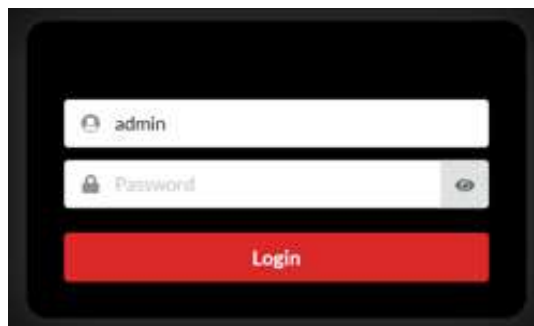

3. When logging in for the first time, a password setup screen will appear.

Enter the desired password twice and click the SAVE button.

The login screen will appear again—enter the username and the password you just set.

**Create Password**

You must create a new password and you need to login again.

Up to 20 or at least 4 with any combination of numeric, English or special character.

New Password

Repeat New Password


Save



### CAUTIONS


The password you set will be deleted if you perform a reset or initialization from the projector's menu under System Settings: Basic → Reset Settings → Initialize.

4. After a successful login, the web control screen will be displayed.

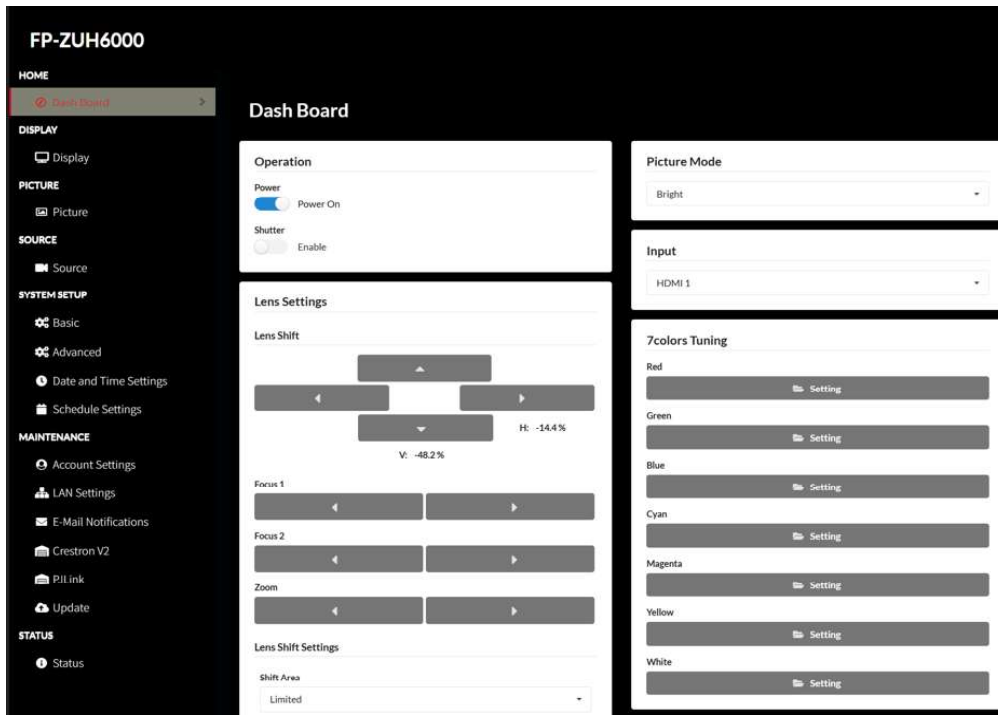


## Step 3: Firmware Update


1. From the navigation menu under MAINTENANCE, select Update.

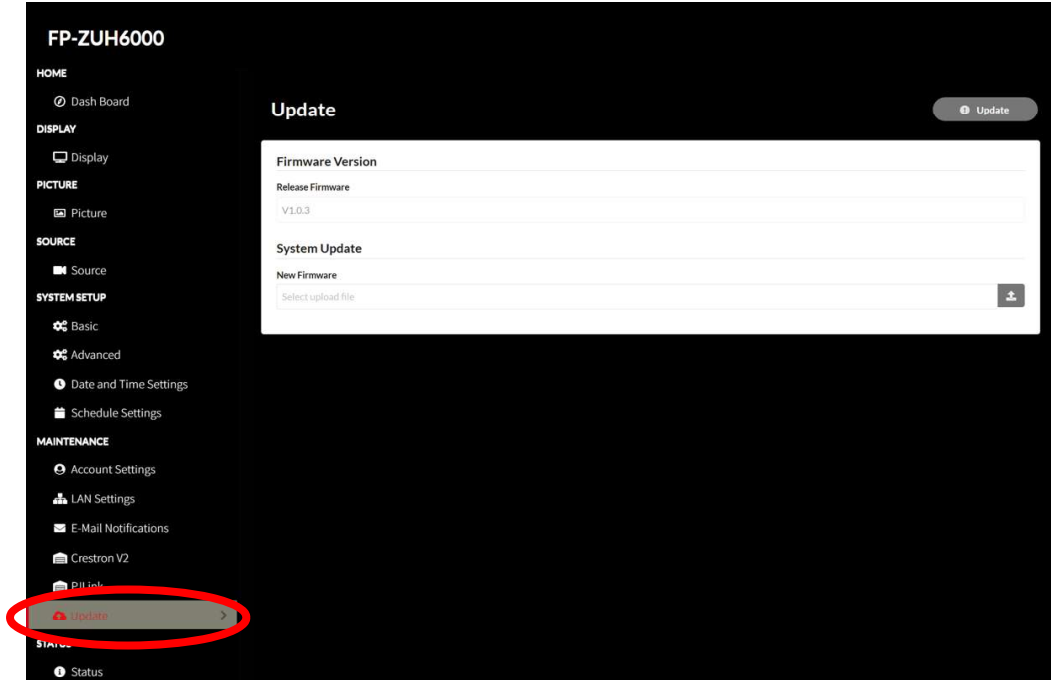

 2. Specify the downloaded firmware file, then click the Update button in the upper right corner.

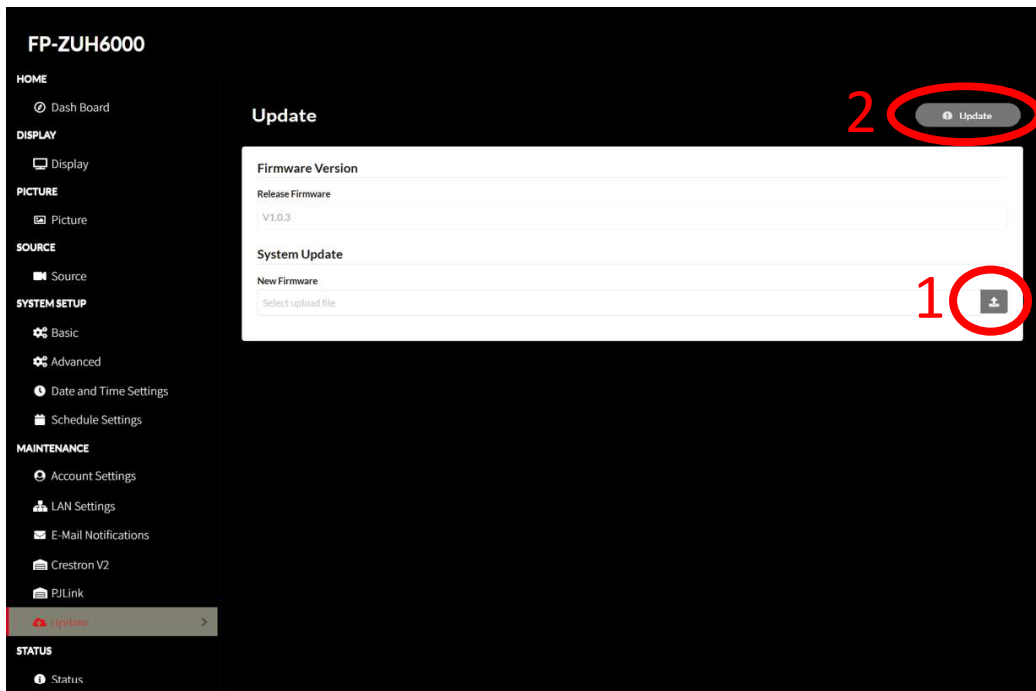

3. A confirmation screen for the firmware update will appear—click Yes to proceed.

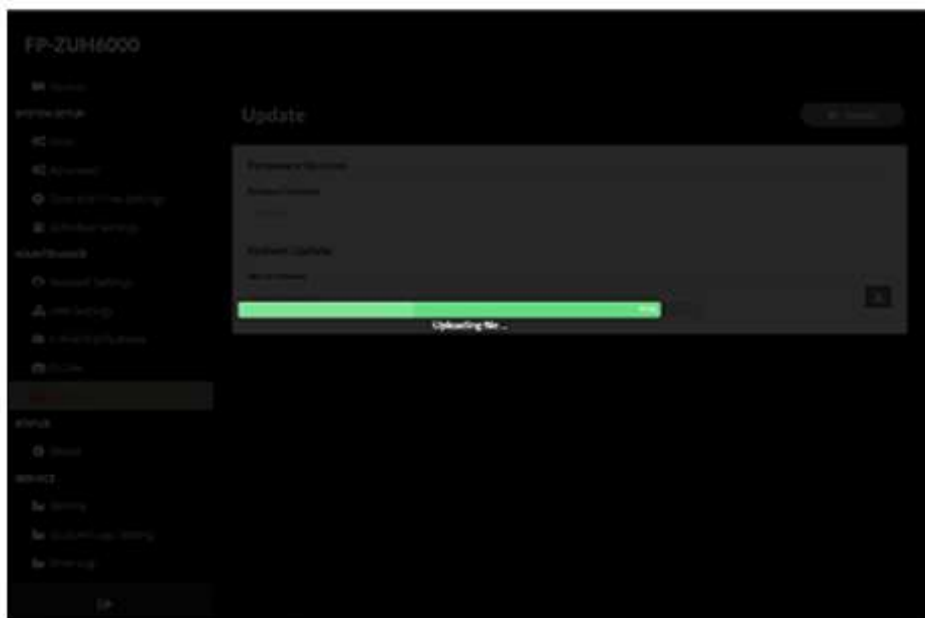

4. If the update is successful, the projector will automatically restart.



### CAUTIONS

Firmware updates may take up to 20 minutes. Do not operate any menus during the update process. Also, do not disconnect the projector's power under any circumstances.