FUJ!FILM

Surveillance Camera

FUJIFILM SX801

Owner's Manual: LAN ONVIF

Table of Contents

Safety Precautions	1
For Your Safety	1
MARNINGS	1
★ CAUTIONS	
General Precautions	1
NOTICES	2
Caution:	2
FCC Warning:	2
For Customers In Canada	2
About the Icons	
Disposal of Electrical and Electronic Equipment in Private Households In the European Union, Norway, I	
and Liechtenstein:	3
Precautions for Use	4
Operating Environment	
Installation	
Use	
Network Settings	4
Introduction	5
Parts of the Camera	
The Control Panel	5
Installation and Connection	6
Installation	6
Screw Hole Specifications	
Connection Schematic	
Operating Mode Selection: DIP Switches	
Connecting to a Computer	δ
Viewing and Recording the Live Feed	9
Dedicated Camera Configuration Software	
Launching the Software	10
The "LIVE VIEW" Tab	11
	40
The "PLAYBACK" Tab	12
The "CONFIGURATION SETTING" Tab	13
CAMERA SETTING	
AF SETTING	
FOCUS AREA	
AF SENSITIVITY	
IRIS SHUTTER SPEED	
GAIN	
DAY/NIGHT	
EXTERNAL TRIGGER	
IR WAVELENGTH	
IMAGE STABILIZATION	16

IMAGE QUALITY SETTING	
OPTICAL FILTER (VLC)	17
WDR	
BACKLIGHT CORRECTION	17
HEAT HAZE REDUCTION	17
FOG REDUCTION	17
NOISE REDUCTION	17
DIGITAL ZOOM	17
USE SETTING	18
BRIGHTNESS	18
CONTRAST	18
Saturation	18
SHARPNESS	18
WHITE BALANCE	
SYSTEM	19
MODEL NAME	19
SERIAL NO	
FW VER. (BODY)	19
FW VER. (IP)	19
APPLICATION VER	19
TIME ZONE	19
PORT	19
NTP SERVER ADDRESS	
CHECKING INTERVAL	
PRIORITY OF TIME SETTING	
IN-CAMERA TIME SETTING	20
ABOUT DEVICE	20
PTZ SETTING	21
RS485 BAUD RATE	21
RS485 ID	21
RS485 TERMINATION	21

Table of Contents

SYSTEM MAINTENANCE	22
REBOOT	22
RESET SETTINGS	22
IMPORT CONFIG FILE	22
EXPORT CONFIG FILE	22
FW UPDATE	22
COPY LOG DATA	22
NETWORK SETTING	23
IPv4 ADDRESS	23
IPv4 SUBNET MASK	23
IPv4 DEFAULT GATEWAY	23
MAC ADDRESS	23
IPv4 ADDRESS	23
IMAGE DATA SETTING	24
SAVE FILES IN PC	24
SAVE FILES IN microSD	24
SAVE FROM LIVE VIEW	24
SAVE FROM PLAYBACK	24
WHEN microSD CARD IS FULL	24
microSD CARD FORMAT	24
VIDEO	25
VIDEO SYSTEM	25
ASPECT FOR VIDEO	25
STREAM TYPE (1st)	25
STREAM TYPE (2nd)	25
STREAM TYPE (3rd)	25
BIT RATE	25
VIDEO QUALITY	25
FRAME RATE	25
ENCODING	25
I FRAME INTERVAL	25

DISPLAY/OSD SETTING	
CAMERA NAME (ID)	26
TITLE	26
DATE	26
DAY OF THE WEEK	26
CAMERA NAME (ID)	26
TITLE	26
TIME	26
DATE FORMAT	26
ONVIF	27
ONVIF	27
USER NAME	27
PASSWORD	27
言語/LANG	28
言語/LANG	28
Troubleshooting	29
Defaults	30
CAMERA SETTING	30
IMAGE QUALITY SETTING	
SYSTEM	
PTZ SETTING	
NETWORK SETTING	
VIDEO	
DISPLAY/OSD SETTING	
ONVIF	
言語/LANG	
Specifications	31



Safety Precautions

For Your Safety

This section lists important precautions that must be followed to ensure safe and correct use of the product. Read them before using the product and observe them during use.

The **A WARNING** and **A CAUTION** indications in this document indicate the following:

MARNINGS Failure to observe warnings could result in death or serious injury.

CAUTIONS Failure to observe cautions could result in injury or property damage.

WARNINGS

- Take all steps necessary to prevent water entering the product. Failure to observe this precaution could result in fire or electric shock. Should water find its way in, disconnect the power source immediately.
- Be sure the product is installed securely. Serious accidents could result should the product fall from a height.
- When working in high places, work with a partner or partners, use a safety line, and take all other precautions necessary to ensure safety. Slipping, falling, or loss of balance could result in serious accidents.
- When installing the camera in high places, ensure that people below keep their distance. Falling objects could cause serious
 accidents.
- Ensure that the surface on which the camera is installed is level. Failure to observe this precaution could cause the camera to fall, potentially causing serious accidents.

! CAUTIONS

- · Keep the product out of direct sunlight.
- Do not turn the product on without first confirming that the power supply is connected correctly.
- The product could cause injury if dropped during transport. Take all precautions necessary to ensure that the product is not dropped.
- Ensure that the voltage of the power supply matches the product's rated voltage. Incorrect voltages could damage the product or result in fire or electric shock.
- When connecting or disconnecting the power cable, hold the plug and not the cable. Damage to the cable could result in fire or electric shock.
- Should you detect any abnormalities such as smoke, unusual noises or smells, or the presence of foreign matter inside the product, disconnect the power supply immediately and contact the original retailer.
- Do not disassemble or modify. Failure to observe this precaution could result in electric shock or product malfunction. Malfunctions or damage resulting from customers disassembling or modifying the product are not covered under warranty.
- Do not aim the camera at the sun. Direct sunlight focused through the lens could damage the product's internal parts.
- Install the camera base down. Installing the camera in other orientations could lead to warping that may impair product performance.

General Precautions

- Use the product only as described in this manual.
- The camera and its accessories are precision devices. Under no circumstances should they be subjected to excessive force.
- · Install the camera in a housing or other location where it will not be exposed to rain, wind, dust, or direct sunlight.
- Bringing the camera abruptly from a cold location to a warm and humid environment could cause the lens to fog. Take measures to allow the camera to adapt to the new environment before subjecting it to changes in temperature and humidity.
- Replace the cap if the camera will not be used for an extended period.
- The camera lens has a special anti-reflective coating. As a result, the back of the lens may appear spotted, but this has no effect on performance.

NOTICES

Verification

Model Number: SX801 Trade Mark: Fujifilm

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution:

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

FCC Warning:

To assure continued compliance, follow the attached installation instructions. This includes using the provided power cord and shielded interface cables when connecting to computer or peripheral devices. Also, any unauthorized changes or modifications to this equipment could void the user's authority to operate this device.

For Customers In Canada

CAN ICES-3(A)/NMB-3(A)

WARNING: This equipment is compliant with Class A of CISPR32. In a residential environment this equipment may cause radio interference.

This product complies with the following EU Directives:

- RoHS Directive 2011/65/EU
- EMC Directive 2014/30/EU

Compliance with these directives implies conformity to applicable harmonized European standards (European Norms) which are listed on the EU Declaration of Conformity issued by FUJIFILM Corporation for this product or product family.

 
This compliance is indicated by the following conformity marking placed on the product:



This marking is valid for non-Telecom products and EU harmonized Telecom products (e.g.Bluetooth).

About the Icons

The symbols on the product represent the following:

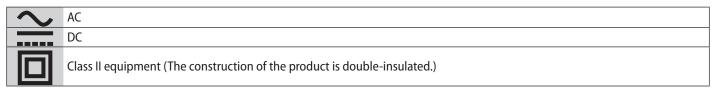

Disposal of Electrical and Electronic Equipment in Private Households In the European Union, Norway, Iceland and Liechtenstein:

This symbol on the product, or in the manual and in the warranty, and/or on its packaging indicates that this product shall not be treated as household waste. Instead it should be taken to an applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences to the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.



Precautions for Use

Operating Environment

- The camera can be used at temperatures of from -10 to +50 °C (temperatures below freezing are only supported if the power supply is not interrupted) and at humidities of from 10 to 80% (no condensation).
- Prolonged use at high temperatures or humidities could degrade components, shortening product life.
- Do not install the product where it will be exposed to solvents or other chemicals.

Installation

- Do not install LAN or audio cables in close proximity to cables for fluorescent lights or other electrical devices. Failure to observe this precaution could impair sound or image quality. Move the cables if signal quality is affected.
- Using the product in close proximity to powerful electromagnetic fields, such as those produced by television transmitter antennas, electric motors, or transformers, could result in distorted or wavy pictures. Should this occur, use steel cable shielding.
- Use a Category 5 or better shielded twisted pair (STP) LAN cable for LAN connections.
- Plastic cable insulation may sometimes be damaged by crows or other birds. Protect cables using a cable conduit.
- Fix cables in place so that they are not subject to repeated vibration, friction, or tugging. Failure to observe this precaution could cause the cable to break.
- Install the product base down.

Use


- Do not aim the lens directly at the sun or other bright light sources or reflections. Failure to observe this precaution could result in deterioration of the image sensor color filter, affecting picture color.
- Do not subject the product to strong physical shocks or vibration. Failure to observe this precaution could result in product malfunction.
- Clean the product with a soft, dry cloth. Never use chemically-treated cloths or solvents such as benzine (petroleum ether), thinner, or alcohol. Failure to observe this precaution could cause warping or discoloration.

Network Settings


- You will need to supply an IP address, subnet mask, and gateway IP address.
- The frame rate may drop if multiple streams are transmitted via unicast.
- When connected to multiple devices, the product will transmit data to all devices at the rate supported by the device with the slowest receiving rate.

Introduction

Parts of the Camera

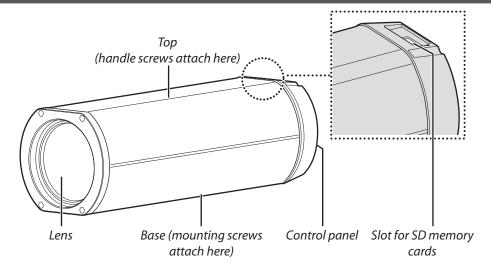

The Control Panel

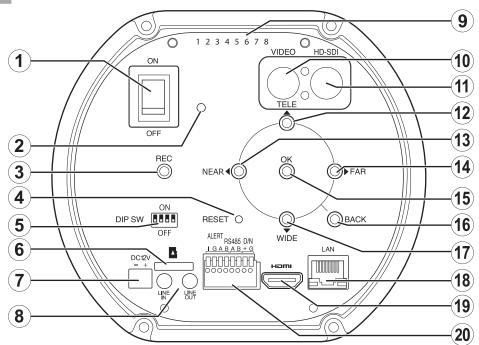


Item	Name
1	Power switch
2	Power lamp
3	REC (record) button
4	RESET button
(5)	DIP switches (4 bits)
6	Slot for micro SD memory cards
7	Power connector
8	Audio input/output connectors
9	Serial number
10	Video output connector

ltem	Name
11)	HD-SDI output connector
12	TELE button
13	NEAR button
14)	FAR button
15	OK/MENU button
16	BACK button
17	WIDE button
18	LAN connector
19	HDMI connector
20	8-pin connector

Installation and Connection

Installation

Use the screw holes on the base to secure the camera to a mount or other surface.

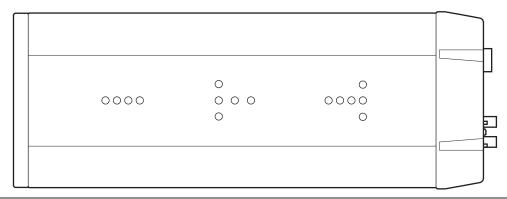




Attach the product securely to a surface that can safely bear the combined weight of the camera and associated hardware. Do not mount the camera in unstable locations or locations subject to frequent vibration or attach it to weak materials such as drywall, ALC (autoclaved lightweight concrete), concrete blocks, or plywood. Injury could result should the product fall from its mounting.




- Use ¼", UNC 20 thread screws with a thread engagement length of 6.5 to 10 mm.
- Install the camera base down.

A handle can be attached using the screws on top of the camera.

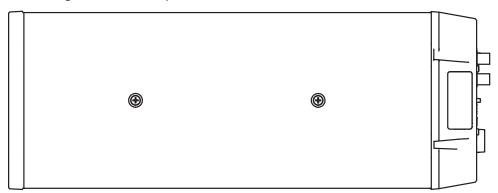

- Use M4 screws with a thread engagement length of at least 4 mm and a protrusion of no more than 6 mm.
- Do not use the screw holes on top of the camera for any other purpose.



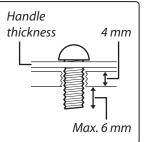


Screw Hole Specifications

The specifications for the screw holes on the top and base of the camera are as follows:

	Туре	Quantity	Depth	Tightening torque
Тор	M4	2	Pass through (threaded depth 4 mm)	80–100 N•cm
Base	¼", UNC 20 thread	15	10 mm	240–300 N•cm

Connection Schematic

The schematic below illustrates how the camera can be installed for use with IP (LAN WEB UI) connections.

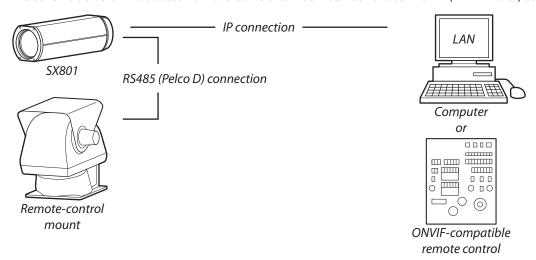


When the camera is connected to a computer via Internet protocols (IP), camera settings can be adjusted using dedicated software. An ONVIF application can be used to view the live feed and control the camera.

Operating Mode Selection: DIP Switches

Use the DIP switches to select the operating mode.

	DIP switch			
Operating mode	1	2	3	4
LAN ONVIF	OFF	ON	OFF	OFF
RS485	ON	OFF	OFF	OFF
Stand-alone	ON	ON	OFF	OFF

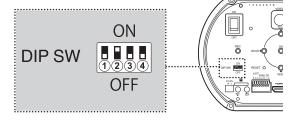


Connecting to a Computer


1 Connect the supplied plug to the power cable and plug the cable into the camera power connector.

CAUTION Use only DC 12 V power.


TIP Customers must supply their own power cable.

2 Use an Ethernet cable to connect the camera to a computer.

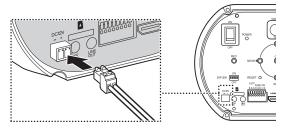

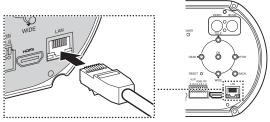

3 Select LAN ONVIF by setting DIP switch ② to "ON" and DIP switches ①, ③ and (4) to "OFF".

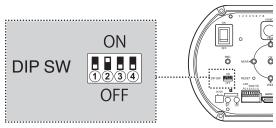

- For information on connecting control units or remote-control mounts, see the *Command List*.
- For information on using control units or remote-control mounts, see the documentation provided with the device.

Viewing and Recording the Live Feed

Dedicated Camera Configuration Software

The camera's live feed can be viewed and recorded using dedicated camera configuration software.

Supported operating systems Windows 7, Windows 10

TIP .Net Framework 4.6.2 or later is required.

To connect to the SX801, you will need to assign it an appropriate IP address. The default IP address and subnet mask assigned to the camera at shipment are as follows:

IP address	192.168.1.10
Subnet mask	255.255.255.0

Extract the software from the zip archive "SX801_Video_Manager.zip" after downloading it to the desktop or another location on the computer.

■ TIP

The software is available for download from the following URL: https://optics.fujifilm.com/security/en/support/download.html



Launching the Software

- 1 Turn on the camera and computer.
- **2** Double-click "SX801 Video Manager.exe" to launch the software. A login dialog will be displayed.
- **3** Enter a user name, password, and client IP address. The default IP address is "192.168.1.10".







First launch: Enter a new user name and password as desired.

Subsequent launches: Enter the existing user name and password.

- Choose a password 8 to 15 characters long. Take all steps necessary to protect the password.
- After 10 failed attempts, password entry will lock. The camera must then be re-initialized in stand-alone mode as described below.

Note that this deletes all existing accounts.

- 1 Turn the camera off.
- TIPS ② Select stand-alone
 - (2) Select stand-alone mode using the DIP switches on the rear control panel (page 7).
 - (3) Turn the camera on.
 - (4) Press and hold the **OK/MENU** button on the rear control panel for 3 seconds to display the menus.
 - **5** Select **IP ADDRESS SETTINGS RESET** in the setup menu.
 - (6) Turn the camera off and return to Step 3 of "Connecting to a Computer" (page 8).


Note: For more information, see the *Owner's Manual: Stand-Alone Mode*.

4 Click LOGIN.

The live feed from the camera will be displayed.

The "LIVE VIEW" Tab


The live feed from the camera is displayed in the "LIVE VIEW" tab.

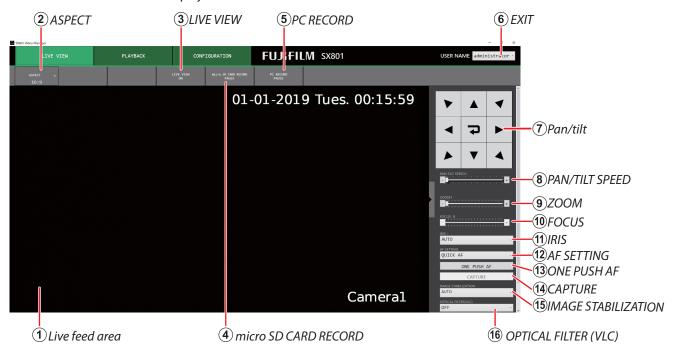

Category	Description
1 Live feed area	View the live feed from the camera.
② ASPECT	Choose the display aspect ratio.
3 LIVE VIEW	Turn the live feed display on or off.
4 micro SD CARD RECORD	Record the live feed to the micro SD memory card.
5 PC RECORD	Record the live feed to the computer.
6 EXIT	Exit the application via the pull-down menu.
7 Pan/tilt	Use the arrows to pan or tilt. Press the center button to return the default position.
8 PAN/TILT SPEED	Adjust the pan/tilt speed.
9 ZOOM	Zoom in or out.
10 FOCUS	Adjust focus. Available only when OFF is selected for AF SETTING .
11) IRIS	Adjust aperture.
12 AF SETTING	Choose from CONTINUOUS AF, QUICK AF, and OFF.
(13) ONE PUSH AF	Click to focus.
(14) CAPTURE	Save the current frame as a still image.
15 IMAGE STABILIZATION	Choose from Auto , OIS , EIS , and OFF .
16 OPTICAL FILTER (VLC)	Enable or disable the VLC filter.
17 DAY/NIGHT	Enable or disable day/night mode.

The "PLAYBACK" Tab

Recorded footage can be viewed in the "PLAYBACK" tab.

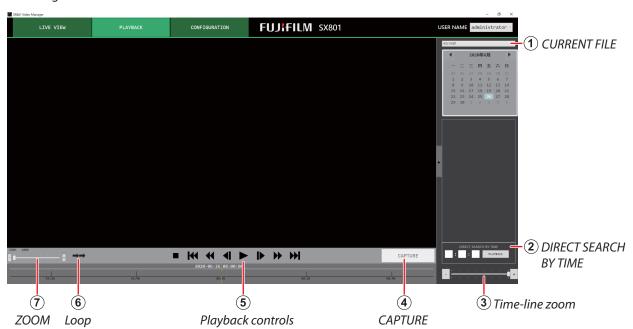

Category	Description
1 CURRENT FILE	Choose footage for playback.
2 DIRECT SEARCH BY TIME	Search for and view footage by time of recording.
3 Time-line zoom	Zoom the time-line in or out.
4 CAPTURE	Save the current frame as a still image.
5 Playback controls	Perform basic playback operations.
6 Loop	Choose from CONTINUOUS and REPEAT (loop) playback.
7 ZOOM	Zoom the playback display in or out.

The "CONFIGURATION SETTING" Tab

Adjust camera settings.



Choosing a category (1) displays the associated settings (2). The live feed from the camera is shown in the live feed area (3).

Category	Description	
CAMERA SETTING	Adjust basic camera settings.	
IMAGE QUALITY SETTING	Adjust image quality settings.	
SYSTEM	View the firmware version and other information or set the camera clock and adjust other system-related	
SISILM	settings.	
PTZ SETTING	Adjust settings for remote-control mounts.	
SYSTEM MAINTENANCE	Restart the camera, update camera firmware, and perform other forms of system maintenance.	
NETWORK SETTING	Adjust basic network settings.	
IMAGE DATA SETTING	Choose a destination for video footage and stills or format micro SD memory cards.	
VIDEO	Adjust video system and streaming settings.	
DISPLAY/OSD SETTING	Adjust display settings, including those for the display of menus.	
ONVIF	Adjust ONVIF settings.	
言語/LANG.	Choose a language for camera menus and displays.	

<u>A</u> CAUTION

Do not insert or remove memory cards while the camera is on. Failure to observe this precaution could corrupt image files or damage the memory card.

CAMERA SETTING

Adjust basic camera settings.

AF SETTING

Choose how the camera focuses when autofocus is enabled via ONVIF.

	Options	_
CONTINUOUS AF	QUICK AF	OFF

FOCUS AREA

Choose how the camera selects the focus area when CONTINUOUS AF is selected for AF SETTING.

Option	Description
CENTER	The camera focuses on the subject at the center of the frame.
SELECT AF AREA	The frame is divided into a three-by-three grid for focus-area selection.

AF SENSITIVITY

Choose how long the focus system will continue to track the current subject after a new subject enters the frame at a different distance from the camera. The higher the value, the longer the camera will wait before switching subjects.

IRIS

Choose the aperture value (iris). See "Specifications" (page 31) for supported values.

SHUTTER SPEED

Choose the shutter speed.

Option	Description	
AUTO	The camera adjusts shutter speed automatically. You can choose the minimum shutter speed.	
MANUAL	Choose the shutter speed manually.	

GAIN

Adjust image brightness.

Option	Description
MANUAL	Choose a value for gain.
AGC	The camera adjusts gain automatically to brighten the image when lighting is poor.
HYPER-AGC	Choose for automatic gain control adapted to low light conditions.

DAY/NIGHT

In day/night mode, the camera records in color when the subject is brightly lit and in black-and-white when the subject is poorly lit. This option is available when **OFF** is selected for both **EXTERNAL TRIGGER** and **OPTICAL FILTER (VLC)**.

Option	Description	
	The camera selects day or night mode automatically according to lighting conditions. You can choose the	
	brightness level that triggers the switch:	
AUTO	• DARK: The switch is triggered when lighting is comparatively dark.	
	• MID: The switch is triggered at light levels between DARK and BRIGHT.	
	• BRIGHT: The switch is triggered when lighting is comparatively bright.	
DAY	The camera operates in day (color) mode at all times.	
NIGHT	The camera operates in night (black-and-white) mode at all times.	



The CAMERA SETTING > DAY/NIGHT, EXTERNAL TRIGGER, and IR WAVELENGTH and the IMAGE QUALITY SETTING > OPTICAL FILTER (VLC) preferences are linked. For more information, see "Lighting Triggers" (page 16).

EXTERNAL TRIGGER

Choose whether day/night selection is performed in response to an external trigger.

Option	Description		
ON(VLC)	Applies a VLC (Visible Light Cut) filter to the external trigger. CAMERA SETTING > DAY/NIGHT and IMAGE		
ON(VLC)	QUALITY SETTING > OPTICAL FILTER (VLC) are disabled.		
ON(CLEAR)	Replaces the filter with clear glass. CAMERA SETTING > DAY/NIGHT and IMAGE QUALITY SETTING >		
ON(CLEAR)	OPTICAL FILTER (VLC) are disabled.		
OFF	The camera does not respond to the external trigger.		



The CAMERA SETTING > DAY/NIGHT, EXTERNAL TRIGGER, and IR WAVELENGTH and the IMAGE QUALITY SETTING > OPTICAL FILTER (VLC) preferences are linked. For more information, see "Lighting Triggers" (page 16).

IR WAVELENGTH

Match the IR wavelength to the infrared light source used. See "Specifications" (page 31) for supported values.



The CAMERA SETTING > DAY/NIGHT, EXTERNAL TRIGGER, and IR WAVELENGTH and the IMAGE QUALITY SETTING > OPTICAL FILTER (VLC) preferences are linked. For more information, see "Lighting Triggers" (page 16).

IMAGE STABILIZATION

Choose an image stabilization option adapted to the scene.

Option	Description
Auto	The camera chooses the type of image stabilization best suited to the scene.
OIS	Reduce the effects of camera shake using optical image stabilization.
	Reduce the effects of camera shake using electronic image stabilization.
OFF	Image stabilization disabled.

Lighting Triggers

Day/night selection can be configured in any of the following three ways:

Day/ mg/re sereet	or can be configured in any or the following times ways.	Configured using	
Configuration		Menu item	Option
① AUTO	Day/night selection is performed automatically in response to lighting conditions.	CAMERA SETTING > DAY/NIGHT	AUTO
2 MANUAL	Day/night selection is performed manually.	DAI/NIGITI	DAY or NIGHT
③ EXTERNAL TRIGGER	Day/night selection is performed in response to input from an external trigger.	CAMERA SETTING > EXTERNAL TRIGGER	ON(VLC)*, ON(CLEAR)*, or OFF

^{*} The option selected for OPTICAL FILTER (VLC) does not apply if a signal is received from the external trigger when ON(VLC) or ON(CLEAR) is selected for EXTERNAL TRIGGER. If no signal is received or if OFF is selected, the optical filter will function as shown in the following table.

The following table shows relation between the option selected for **OPTICAL FILTER (VLC)** and the filter type, image color, and wavelength when day/night selection is enabled:

iengen wien di	CONFIGURATION SETTING > IMAGE QUALITY SETTING >			CONFIGURATION SETTING > CAMERA SETTING > IR WAVELENGTH	
Option	OPTICAL FILTER (VLC)	Filter	Image color	Status	Supported wavelengths
DAY	OFF	IRCF	Color	Disabled	Visible light only
DAI	ON	VLCF	- Black and	Disabled	808 nm only
NIGHT	OFF	CLEAR	white	Enabled	950 nm, 940 nm, 850 nm,
	ON	VLCF] wille	Lilabled	808 nm, visible light

IMAGE QUALITY SETTING

Adjust image quality settings.

OPTICAL FILTER (VLC)

Enable or disable the VLC (Visible Light Cut) filter.

Option	Description
ON	Enable the VLC filter, blocking visible light and recording only infrared footage.
OFF	Enable the clear (CLEAR) or infrared cut-off filter (IRCF).



The CAMERA SETTING > DAY/NIGHT, EXTERNAL TRIGGER, and IR WAVELENGTH and the IMAGE QUALITY SETTING > OPTICAL FILTER (VLC) preferences are linked. For more information, see "Lighting Triggers" (page 16).

WDR

Reduce loss of detail in highlights and shadows. Choose higher values for high-contrast subjects.

BACKLIGHT CORRECTION

Reduce loss of detail in the shadowed areas of backlit subjects. The higher the value, the greater the effect.

HEAT HAZE REDUCTION

Reduce the wavering effect of heat haze, making the image clearer overall. The higher the value, the greater the effect.

FOG REDUCTION

Make images where the subject is obscured by fog more vivid and easier to see. The higher the value, the greater the effect.

NOISE REDUCTION

Reduce the effects of noise for a smoother picture. The higher the value, the greater the effect.

DIGITAL ZOOM

Select **ON** to enable digital zoom.

USE SETTING

Choose a shooting preset.

Option	Description	
SURVEILLANCE	Emphasize outlines.	
MOVIE PRODUCTION	Choose for accurate color reproduction when shooting non-surveillance footage at social gatherings or other	
	events.	

BRIGHTNESS

Adjust brightness. The higher the value, the greater the effect.

CONTRAST

Adjust contrast. The higher the value, the greater the effect.

SATURATION

Adjust color saturation. The higher the value, the greater the effect.

SHARPNESS

Make outlines more or less sharply defined. The higher the value, the greater the effect.

WHITE BALANCE

Match white balance to the light source (for example, sunlight or artificial lighting).

Option	Description
AUTO	The camera adjusts white balance automatically.
CUSTOM 1/CUSTOM 2	Measure a value for white balance using a piece of paper or other white reference object.
FINE	For subjects lit by direct sunlight.
SHADE	For subjects in the shade or under overcast skies.
COLOR TEMPERATURE	Choose a color temperature (3000K, 5000K, or 9000K).

SYSTEM

View the firmware version and other information. You can also set the camera clock and adjust other system-related settings.

MODEL NAME

View the camera model name.

SERIAL NO.

View the product serial number.

FW VER. (BODY)

View the camera firmware version.

FW VER. (IP)

View the version of the IP connection firmware.

APPLICATION VER.

View the application version.

TIME ZONE

Choose a time zone.

PORT

Adjust port number settings.

NTP SERVER ADDRESS

Enter the IP address for the NTP (Network Time Protocol) server.

CHECKING INTERVAL

Choose how often the camera checks the NTP server port.

PRIORITY OF TIME SETTING

Choose whether the time display matches the camera's internal clock (DEVICE) or the time reported by the NTP server (NTP).

Option	Description	
DEVICE	The display shows the time reported by the camera's internal clock.	
NTP	The display shows the time reported by the NTP server.	

The "CONFIGURATION SETTING" Tab

IN-CAMERA TIME SETTING

Set the camera clock.

ABOUT DEVICE

View OSS information.

PTZ SETTING

Adjust settings for remote-control mounts.

RS485 BAUD RATE

Choose the baud rate for data transmitted via RS485.

Options					
115200bps	38400bps	19200bps	9600bps	4800bps	2400bps

RS485 ID

Choose the RS485 ID (1-31).

RS485 TERMINATION

Select **ON** to enable the RS485 termination resistor.

SYSTEM MAINTENANCE

Restart the camera, update camera firmware, and perform other forms of system maintenance.

REBOOT

Select **OK** to restart the camera.

RESET SETTINGS

Select OK to restore camera settings to their default values. Items in the following menu are not affected:

NETWORK SETTING

IMPORT CONFIG FILE

Import settings from a camera settings file. Click **BROWSE** and choose a settings file created using **EXPORT TO CONFIGURATION FILE**.

EXPORT CONFIG FILE

Export camera settings. Click OK to download the settings folder.

FW UPDATE

Update the camera firmware. Click BROWSE and select the file containing the new firmware version to begin the update.

COPY LOG DATA

Save a copy of camera logs. Click BROWSE, choose a destination, and click OK to save the logs.

NETWORK SETTING

Adjust basic network settings.

IPv4 ADDRESS

Change the camera's IPv4 address.

IPv4 SUBNET MASK

Change the camera's IPv4 subnet mask.

IPv4 DEFAULT GATEWAY

Change the camera's default IPv4 gateway.

MAC ADDRESS

View the camera's MAC address.

IPv4 ADDRESS

Choose how the IPv4 address is assigned.

Option	Description
MANUAL	Choose the IPv4 address manually.
AUTO (DHCP)	The IPv4 address is assigned automatically.

TIP Click SAVE to save changes.

IMAGE DATA SETTING

Adjust image data settings.

SAVE FILES IN PC

View the destination for footage saved to the computer. To choose a different folder, click BROWSE.

Option	Description
ON	Footage is saved to the computer.
OFF	Footage is not saved to the computer.

SAVE FILES IN microSD

Choose whether to save footage to micro SD memory cards.

Option	Description
ON	Footage is saved to the micro SD memory card.
OFF	Footage is not saved to micro SD memory cards.

SAVE FROM LIVE VIEW

Choose the destination for stills captured from the live feed.

SAVE FROM PLAYBACK

View the destination for stills captured during playback. To choose a different folder, click BROWSE.

WHEN microSD CARD IS FULL

Choose whether the camera overwrites existing data when micro SD memory cards are full.

Option	Description
OVERWRITE	When the micro SD memory card is full, the camera overwrites existing files to make room for new data.
NOT OVERWRITE	The camera stops recording data when the micro SD memory card is full.

microSD CARD FORMAT

Select OK to format the micro SD memory card. Any existing data on the card will be deleted.

VIDEO

Adjust video settings.

VIDEO SYSTEM

Choose the standard (NTSC (60 Hz) or PAL (50 Hz)) used for video output from the camera.

ASPECT FOR VIDEO

Choose how video is displayed on monitors with an aspect ratio that does not match the selected format.

Option	Description
SIDE CUT	The image is cropped to fit the display.
LETTERBOX	The image is displayed at its original aspect ratio with black bars above and below.
SQUEEZE	Video with an aspect ratio of 16:9 is reformatted to fit displays with a 4:3 aspect ratio.

STREAM TYPE (1st)

Choose from three video resolution options for the primary stream.

STREAM TYPE (2nd)

Choose from two video resolution options for the secondary stream, or choose OFF to disable the secondary stream altogether.

STREAM TYPE (3rd)

Choose a video resolution option for the tertiary stream, or choose OFF to disable the tertiary stream altogether.

BIT RATE

Choose whether streaming video is encoded at a **FIXED** or **VARIABLE** bit rate. Note that this option is available only when H.264 encoding is selected.

VIDEO QUALITY

Choose the output quality for streaming video (HIGH, STANDARD, or LOW). Note that this option is available only when H.264 encoding is selected.

FRAME RATE

Choose the frame rate for streaming video from values between 1 and 30 fps.

ENCODING

Choose an encoding for streaming video.

I FRAME INTERVAL

Choose the I-Frame interval for streaming video.

DISPLAY/OSD SETTING

Adjust display settings.

CAMERA NAME (ID)

Choose whether the camera name is displayed.

TITLE

View, hide, and position the title display.

DATE

View, hide, and position the date display.

DAY OF THE WEEK

View or hide the day-of-the-week display.

CAMERA NAME (ID)

Name the camera. Symbols and alphanumeric characters can be used.

TITLE

Enter a title. Symbols and alphanumeric characters can be used.

TIME

Choose whether times are displayed using a 12- or 24-hour clock.

DATE FORMAT

Choose the date display format.

TIP Click SAVE to save changes.

ONVIF

Adjust ONVIF settings.

ONVIF

Option	Description
ON	Enable ONVIF.
OFF	Disable ONVIF.

USER NAME

Enter an ONVIF user name.

PASSWORD

Enter an ONVIF password.



TIP Click SAVE to save changes.

言語/LANG.

Choose a language for camera menus and displays.

言語/LANG.

Choose a language.

Troubleshooting

Should the product fail to function as expected, consult the table below. If you are unable to find a solution here, contact your local Fujifilm distributor.

Problem	Solution	
No video, or the image in the video is dark.	 The camera is off: Check that the cables are correctly connected, the power lamp is lit, and the correct voltage is being supplied to the lens. The cables are not correctly connected: Check that the cables are correctly connected. The lens cap is on: Remove the lens cap. The iris is stopped down to the minimum aperture: Select maximum aperture. Shutter speed requires adjustment: Select an appropriate value for shutter speed. 	
The image in the video is "washed out". The image in the video is out of focus.	 Camera white balance, gain, shutter speed, or other settings require adjustment: Confirm that settings are adjusted appropriately. Aperture requires adjustment: Adjust aperture appropriately. 	
Spots appear in the video.	• The lens is dirty: Clean the lens.	

Defaults

Selecting **OK** for **SYSTEM MAINTENANCE** > **RESET SETTINGS** restores settings to the following default values:

CAMERA SETTING

Option	Default
AF SETTING	QUICK AF
FOCUS AREA	CENTER
AF SENSITIVITY	1
IRIS	AUTO
SHUTTER SPEED	AUTO (1/30)
GAIN	AGC
DAY/NIGHT	AUTO (MID)
EXTERNAL TRIGGER	OFF
IR WAVELENGTH	VISIBLE LIGHT
IMAGE STABILIZATION	Auto

IMAGE QUALITY SETTING

Option	Default
OPTICAL FILTER (VLC)	OFF
WDR	OFF
BACKLIGHT CORRECTION	OFF
HEAT HAZE REDUCTION	OFF
FOG REDUCTION	OFF
NOISE REDUCTION	2
DIGITAL ZOOM	OFF
USE SETTING	SURVEILLANCE
BRIGHTNESS	11
CONTRAST	3
SATURATION	3
SHARPNESS	4
WHITE BALANCE	AUTO

SYSTEM

Option	Default
TIME ZONE	GMT+09:00

PTZ SETTING

Option	Default
RS485 BAUD RATE	9600 bps
RS485 ID	7
RS485 TERMINATION	ON

NETWORK SETTING

Option	Default
IPv4 ADDRESS	192.168.1.10
IPv4 SUBNET MASK	255.255.255.0
IPv4 DEFAULT GATEWAY	192.168.1.254

VIDEO

Option	Default
VIDEO SYSTEM	NTSC (60 Hz)
ASPECT FOR VIDEO	SIDE CUT
STREAM TYPE (1st)	1080p
STREAM TYPE (2nd)	OFF
STREAM TYPE (3rd)	OFF
BIT RATE	FIXED
VIDEO QUALITY	HIGH
FRAME RATE	15 fps
ENCODING	H.264
I FRAME INTERVAL	15

DISPLAY/OSD SETTING

Option	Default
CAMERA NAME (ID)	BOTTOM RIGHT
TITLE	BOTTOM RIGHT
DATE	BOTTOM RIGHT
DAY OF THE WEEK	ON
TIME	24H
DATE FORMAT	MM-DD-YYYY

ONVIF

Option	Default
ONVIF	ON

言語/LANG

Option	Default
言語/LANG	ENGLISH

Specifications

Model	FUJIFILM SX801
Focal length	20–800 mm
Optical zoom	40×
Digital zoom	1.25×
Iris range	f/4-f/16
Minimum object distance	10 m at focal lengths of 20–400 mm
(M.O.D.)*	20 m at focal lengths of 400–800 mm
lmage sensor	CMOS sensor
	• File format
Video	- Stand-alone: MOV (Stereo sound)
	- With ONVIF application software: HWP (Monaural sound)
	Video encoding: H.264 compliant, Motion JPEG
Frame size	1920×1080, 1280×720, 640×480 (NTSC), 768×576 (PAL)
Metering	Average
Focus modes	Continuous AF, quick AF, MF
Aperture selection	AUTO, f/4-f/16
Shutter speed	AUTO (with minimum speed selection of $\frac{1}{8} - \frac{1}{125}$ s), MANUAL (1 – $\frac{1}{20000}$ s)
Gain adjustment	MANUAL (ISO 400 – ISO 819200), AGC, HYPER AGC
Day/night	AUTO (DARK, MID, BRIGHT), DAY, NIGHT
Wavelengths	VISIBLE LIGHT, 950 nm, 940 nm, 850 nm, 808 nm
Image stabilization	AUTO, OIS, EIS, OFF
Wide dynamic range	Selectable (2 levels)
Back light compensation	Selectable (2 levels)
Heat haze reduction	Selectable (3 levels)
Fog reduction	Selectable (3 levels)
Noise reduction	Selectable (3 levels)
Shooting Mode Preset	SURVEILLANCE, MOVIE PRODUCTION
Brightness	Selectable (21 levels)
Contrast	Selectable (5 levels)
Saturation	Selectable (5 levels)
Sharpening	Selectable (5 levels)
Sharpennig	AUTO, CUSTOM 1, CUSTOM 2, FINE, SHADE, COLOR TEMPERATURE (choose a color temperature in degrees
White balance	Kelvin from 3000K, 5000K, and 9000K)
Image ordered some store	
Image output connectors Video streams	HDMI, HD-SDI, composite (BNC) Up to 3 (available in IP connection mode only)
video streams	- 1 · · · · · · · · · · · · · · · · · ·
Video output	• NTSC: 1080p, 720p, 480p
	• PAL: 1080p, 720p, 576p
External interface	Ethernet (100BASE-T), RS-485, external trigger (DAY/NIGHT)
Internet protocol	ONVIF (Profile-s)
RS-485 protocol	Pelco D, P (includes custom commands, IP connection mode supports Pelco D only)
Power source	DC 12 V
Power consumption	Approx. 15 W
Dimensions (W × H × D)	156 mm × 139 mm × 410 mm/6.14 in. × 5.47 in. × 16.14 in.
Weight	Approx. 6.4 kg/14.11 lb
Operating environment	• Temperature: −10 °C − +50 °C/+14 °F − +122 °F
	• Humidity: 10% – 80% (no condensation)
Tilt limit	±45° from level (base down)
* From the foremost part of the	



FUJIFILM Corporation

Optical Device & Electronic Imaging Products Div. 1-324 Uetake, Kita-ku, Saitama City, Saitama 331-9624, Japan TEL. 81-48-668-2143 FAX. 81-48-651-8517 http://www.fujifilm.com/

