


How to use Gray Adjustment


1. Click **Printer Adjustment** on the main screen.

The Printer Adjustment screen is displayed.

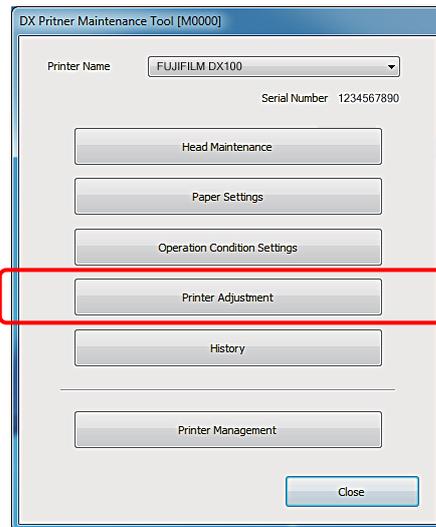

2. Click **Gray Adjustment**.


The Gray Adjustment screen is displayed.

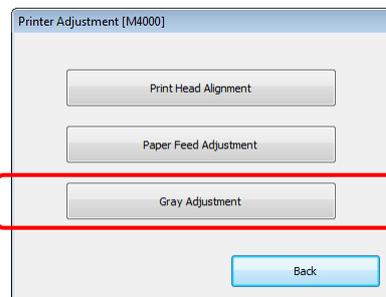

3. Select the image **Quality** setting you want to adjust.


Note:

- ❑ Available image quality settings differ according to the loaded paper type.
- ❑ The value of the gray adjustment is independent in the paper type and image quality setting.

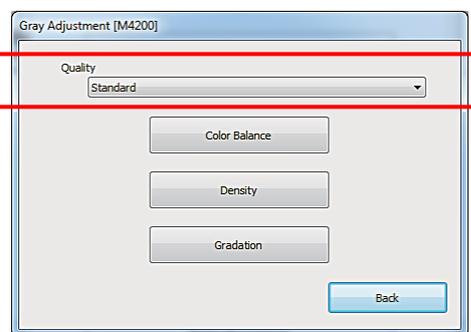


4. Click **Color Balance**.

The Color Balance screen is displayed.

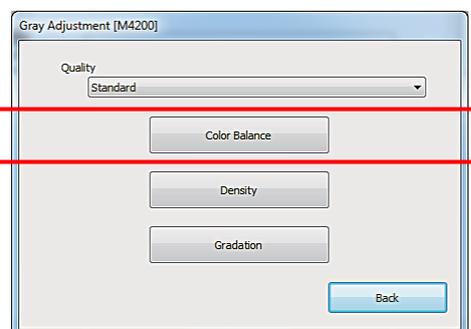


5. On the Color Balance screen, click **Print** from **Adjustment Pattern**.

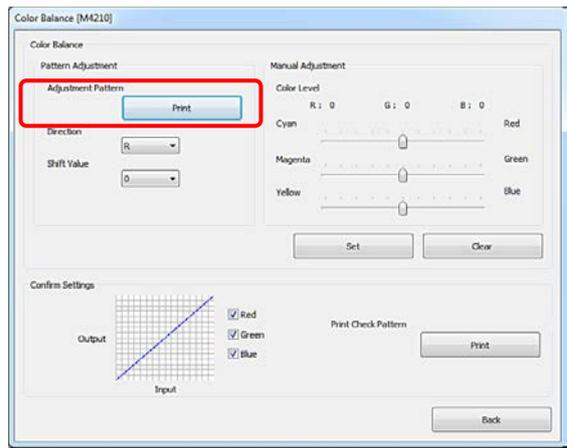


6. Select **Adjustment Pattern Shift Value**, and then click **Print**.

The adjustment pattern is printed.

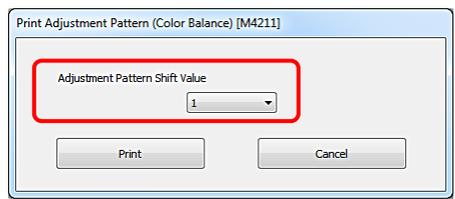

7. Select the best pattern from the adjustment patterns, and check the adjustment number.


The color balance will be shifted to 12 directions. The adjustment numbers are the letters and numbers printed at the bottom left of each pattern. (Example:RY-5)

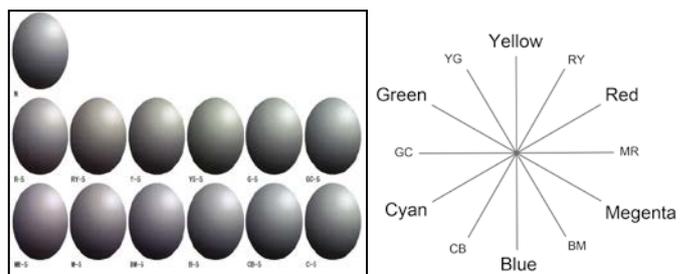

8. Set the Direction and Shift Value.

Set the adjustment number for the selected adjustment pattern.

When you change the settings, the changes are reflected in the slide bar on the right of the screen and the graph (tone curve) at the bottom of the screen.

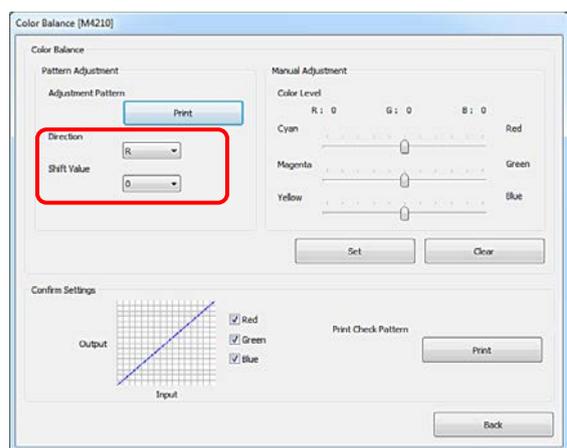


Note:

- ❑ The tone curve shows the output strength for each input color (R: Red, G: Green and B: Blue). When there are no corrections, the line goes straight from the top right to the bottom left; if the line curves down from this position, the colors become darker, and if the line curves up, the colors become lighter.
- ❑ You can adjust the color balance manually in Manual Adjustment on the right of the screen. When adjusting manually, the value set in Pattern Adjustment is no longer used.

9. Click Print from Print Check Pattern.

The check pattern is printed.
Check that the color balance is as you intended.

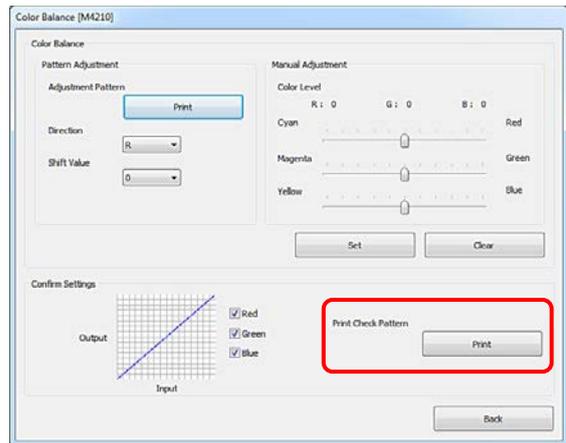

10. Click Set.

The settings are applied.

11. Click Back.

The Settings screen closes.