


DX 400

Quick Reference Guide

Replacing Maintenance Box

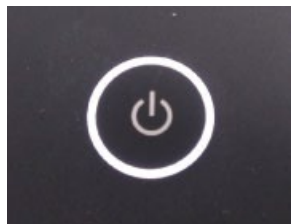

1

Check that the power light is lit.


If the power light is flashing, the printer is operating. Wait until all operations have stopped.



2

Open the ink supply door on the right side.

A warning buzzer sounds when you open the cover.

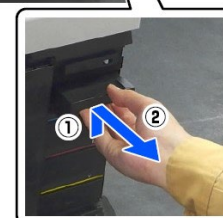


3

Remove the maintenance box slowly without tilting it.

Push up, and then pull it out.

! *Important:*
Do not touch the chip on the maintenance box. Doing so may prevent normal operation and printing.

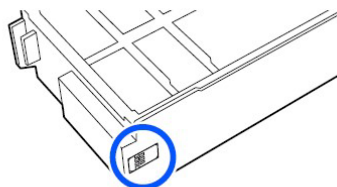

4

Prepare a new maintenance box.




5

Insert the new maintenance box.



6

Close the ink supply unit cover.

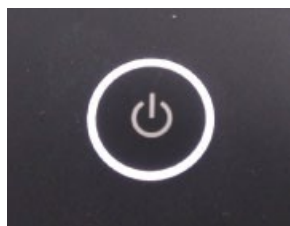

7

Check that the power light has lit.

