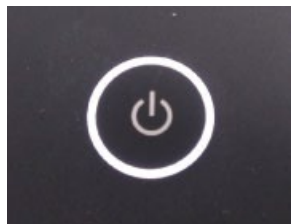


Loading Paper

**1**

Check that the power light is lit.

If the power light is flashing, the printer is operating. Wait until all operations have stopped.

**2**

Remove the scrap paper box and dispose of the paper scraps. Inspect the inside of the printer for any stray paper scraps.


**3**

Pull out the roller paper unit.

**4**


Remove the spindle unit.

Do not lift the spindle unit by the knobs when removing it. The spindle may come apart, fall and become damaged.

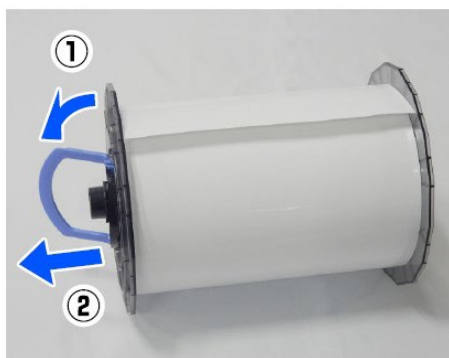
**5**

REMOVING THE PAPER CORE:

Raise the knob and remove the left side media edge guide.

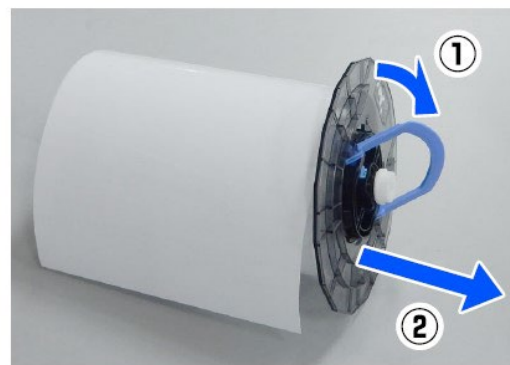**6**

Raise the knob and remove the right-side media edge guide and spindle. Remove the core and dispose.

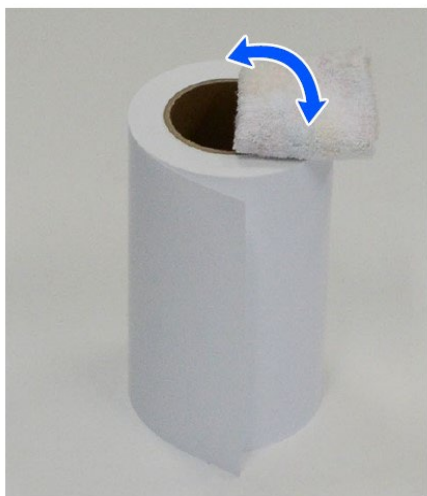


7

ATTACHING NEW ROLL PAPER.

Remove the new roll paper from its packaging, and stand it on end on a flat clean, dry surface. Next, wipe the end of the roll paper with a soft cloth several times to remove any dirt, such as paper dust.

Place the roll paper so the leading edge is facing as shown in the photo above.

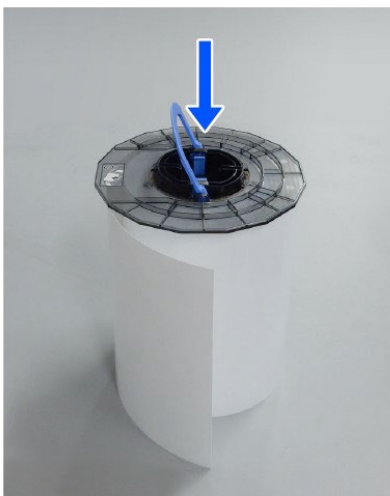


8

Raise the knob on the media edge guide and place it on the roll paper.

Press it until there is no gap between the media edge and the roll paper.


If the spindle is inserted into the media edge guide, first remove the spindle and then press the media edge guide in to securely attach it to the paper roll.

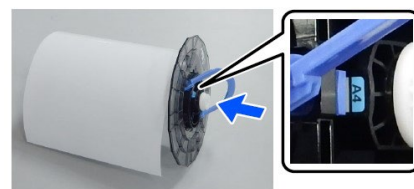

9

Insert the spindle into the media guide until the position of the width of the paper being loaded (6').

Insert the end of the spindle that has no gear first.

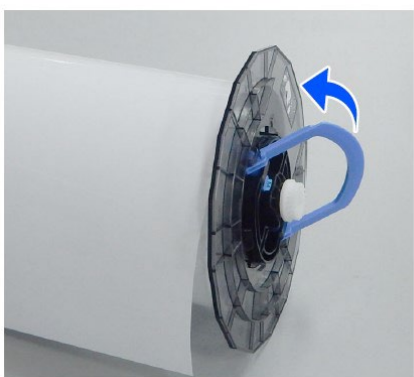

10

Lower the knob and secure the media edge guide.

OK




11

When doing this, confirm that there are no gaps between the media edge guides and the roll paper.



12

Insert the media edge guide into the side opposite to the shaft of the spindle unit, and firmly clamp the roll paper between the media edge guides.

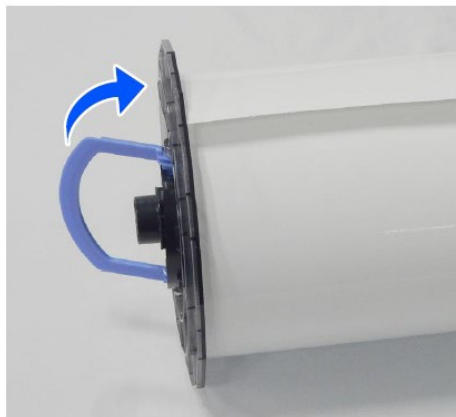

13

Confirm that there are no gaps between the media edge guide and the roll paper, lower the knob, and then secure the media edge guide.



OK



NO



14

INSTALLING THE SPINDLE UNIT

Load the spindle unit into the roll paper unit.


Position the gear on the end of the spindle on the right side.

Check that the shaft of the spindle unit fits into the bearing and that the gears engage.




15

Insert the leading edge of the roll paper into the paper slot until you hear a beep.

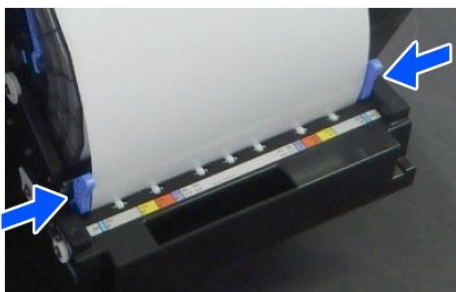


16

Align the edge guides to the width of the roll paper.

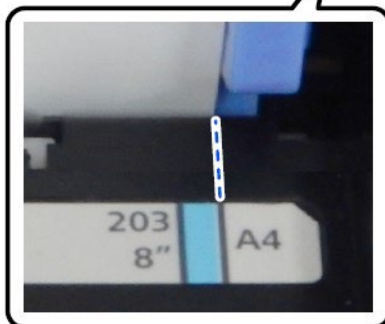


17


Confirm that the position of the edge of the roll paper matches the label showing the paper size, and that there are no gaps between the left and right edge guides and the edges of the roll paper.

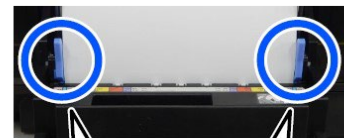

OK

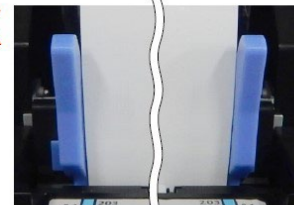

NO

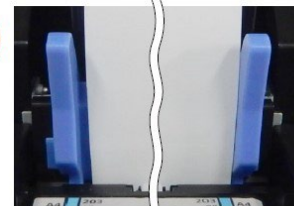

18

If the labels do not match or there are gaps at the left or right edge guides, then the position in which the roll paper is loaded is not aligned with the spindle unit. Reload the roll paper in the correct position.



19

Push the roll paper unit all the way in.



20

Attach the scrap paper box.

The paper feed starts after it is attached. When paper feed stops, the control panel screen displays the paper type settings.

Press **OK** as paper type will not to be changed at any time.