


Replacing Ink Supply Unit

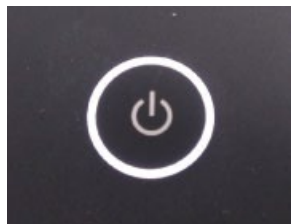

- 1** Check that the power light is lit.
- If the power light is flashing, the printer is operating. Wait until all operations have stopped.


- 2** On the control panel, check which ink supply unit(s) need to be replaced.




- 3** Open the ink supply cover on the side to be replaced.




- 4** Push in the ink supply unit tray to pull it out.

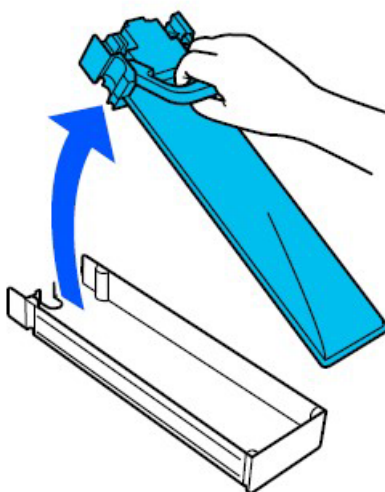

- 5** Remove the ink supply unit.
- Lift the handle and then remove it.

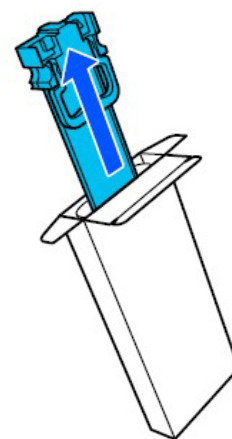

Important:
Do not touch the chip on the ink supply unit.
You may not be able to print properly.

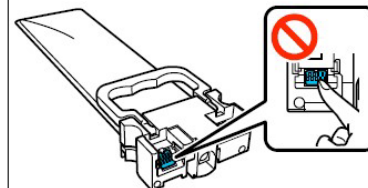

- 6** Remove the new ink supply unit from the box.

IMPORTANT: Do not touch the chip on the ink supply unit. You may not be able to print properly.



7 Confirm the color of the label, and then put the ink supply unit tray back into the printer.



8 Close the ink supply unit cover.



Important:

- ❑ If you do not have a new ink supply unit for installation, leave the expended ink supply unit in the printer until the new one is ready. If the printer is left without an ink supply unit, it may malfunction.
- ❑ When the ink supply unit being used falls below the limit, replace it with a new ink supply unit as soon as possible.
- ❑ Do not leave the printer without ink supply units installed. The inks inside the printer may dry and you may not be able to print. When you are not using the printer, make sure there is an ink supply unit installed in each slot.

9 Confirm that the status light is off.