


### Features:

- 50 picoliter calibrated drop size
- 256 individually addressable, inline nozzles
- Excellent jet straightness
- Excellent channel to channel uniformity
- High frequency continuous operation
- Orientation independent
- Designed for long service life
- Operation up to 90°C [194°F]
- Permits high viscosity jetting fluids
- Dual ported for ease of flushing
- Optional temperature control
- Compatible with aqueous fluids

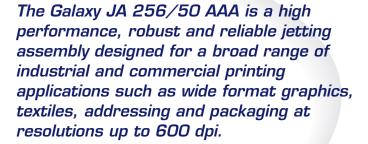

The Galaxy JA 256/50 AAA is a compact ink jet jetting assembly designed specifically for applications requiring multiple printheads packed tightly together. General compatibility with a wide range of fluids makes the Spectra Galaxy JA 256/50 AAA highly versatile.

Four electrically independent piezoelectric slices, each with 64 addressable channels, are combined to provide a total of 256 jets. The nozzles are arranged in a single line, at a native 0.010 inch distance between nozzles.

The fluid interface and electrical connection are at the top of the jetting assembly and several mounting configurations are possible. This arrangement permits extremely tight packing in the print process direction. The dual ported fluid interface facilitates flushing for quick change-overs and for displacing drying fluids with inert fluids during periods of non-use.

This jetting assembly contains serial-to-parallel converters for selecting which jets to fire; all jets can be fired simultaneously or individually. By using an optional Head Interface Board, image data can be daisy-chained into one serial stream to reduce the data interface hardware requirements. A high voltage fire pulse with controlled slew rates is used to actuate the pumping chambers within each channel.

Optional temperature control components are available for precise control of fluid viscosity. Optional deaeration hardware can be provided.





**FUJIFILM Dimatix** is the world leader in the manufacture of drop-on-demand inkjet products and technologies with over 870 patents since its inception as Spectra Corporation in 1985. We provide exceptional products and customer support.


Parameter	Galaxy JA 256/50 AAA
Number of addressable jets	256
Nozzle spacing	254 microns [0.010 in.]
Nozzle diameter	42 microns
Calibrated drop size	50 picoliters
Adjustment range for drop size	45 - 55 picoliters
Drop size variation, 1 sigma*	5%
Jet Straightness, 1 sigma*	5 mrad [0.29°]
Nominal drop velocity	8 m/sec
Drop velocity variation, 1 sigma*	5%
Crosstalk, maximum	5%
Operating temperature range	up to 90°C [194°F]
Fluid viscosity range (at jetting temperature)	8 - 20 cP
Compatible jetting fluids	Organic solvents; UV curables, Aqueous
Maximum operating frequency	20 kHz


<sup>\*</sup>at constant frequency

### **Physical Dimensions**

# 102mm [4.00 in.] Approximate weight 113 grams [3.98 oz] Nozzle line length 64.8mm [2.55 in.]

### **Jetting Characteristics**

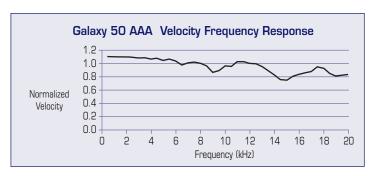

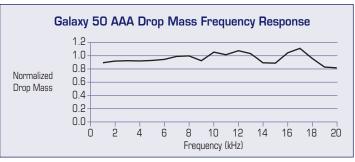

Product data presented above are for guideline purposes only. For design and engineering work using this product, please contact Dimatix Technical Support for the appropriate Product Manual containing full Product Specifications.





# **Corporate Office:** FUJIFILM Dimatix, Inc.

FUJIFILM Dimatix, Inc. 2250 Martin Avenue Santa Clara, CA 95050 USA

Tel: (408) 565-9150 Fax: (408) 565-9151 Email: info@dimatix.com

## New Hampshire Facility: FUJIFILM Dimatix. Inc.

FUJIFILM Dimatix, Inc. 109 Etna Road Lebanon, NH 03766 USA

Tel: (603) 443-5300 Fax: (603) 448-9870 Email: info@dimatix.com

### Japan Office:

FUJIFILM Global Graphic Systems Co., Ltd. 2-26-30 Nishiazabu Minato-ku, Tokyo 106-0031 Japan Advanced Marking Strategy Division

Phone: +81 3 6419 0530
Fax: +81 3 6419 9840
E-mail: dmp\_ffgs@ffgs.fujifilm.co.jp

### Europe Office:

Tel: +44 7739 863 505 Fax: +44 870 167 4328 Email: euro@dimatix.com

### Korea Office:

Email: mdkorea@dimatix.com

### Taiwan Office:

Email: mdtaiwan@dimatix.com

### China Office:

FUJIFILM Dimatix China Service Center Building 30, 1000 Jinhai Road Pudong New Area, Shanghai China 201206 Email: china@dimatix.com

### Singapore Office:

Email: mdsingapore@dimatix.com